

# Information Note

## Rack mounting a Vega – Vega 50 analogue, Vega 50 BRI, Vega 100 and Vega 400



Vega gateways may be placed on a flat surface, or alternatively, rack mounted in a 19-inch rack.

This document specifies the method to be used when rack mounting a Vega gateway.

### Components

Before attempting to rack mount the Vega, ensure that you have the following items:

1. The Vega gateway
2. Two rack mount brackets – supplied with the Vega gateway
3. Six bolts, each with a washer and lock washer – supplied with the Vega gateway
4. Pozidrive screw driver (not supplied)
5. Rack mount bolts to attach Vega into the 19" rack (not supplied)
6. Flat bladed screwdriver for rack mount bolts (not supplied)



Rack mount brackets




Bolts with washer and lock washer



Rack mount bolts  
(not supplied)

Note: For the Vega 400 there are left and right handed rack mount brackets.

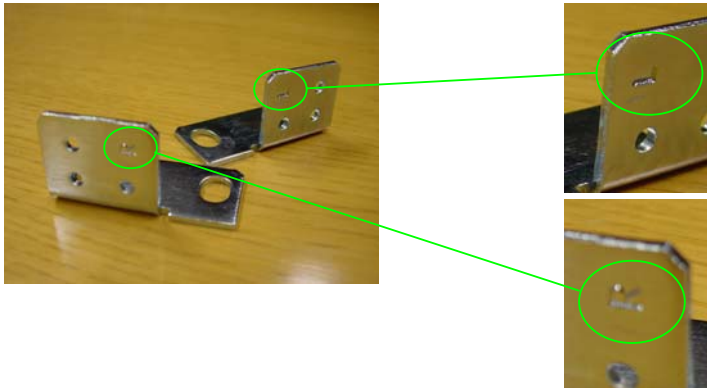

Look for the L (left) and R (right) indicators to identify which side they fit.

### Install Rack mount brackets

Look for the set of 3 holes on the side of the Vega



Insert and tighten supplied bolts (with their washers) securely in all three holes



Where required, the rack mounts may be mounted to the rear of the Vega.



## Install Vega in the 19" rack

Select 1 hole from the upper pair and one hole from the lower pair and tighten the 19" rack bolt (not supplied) securely



## Warnings

1. The rack mount brackets are designed to support the weight of a Vega; do not place other items on top of the Vega once installed in the 19" rack.
2. Ensure that there is proper ventilation to the Vega once it is installed in the 19" rack.
3. Only mount the Vega in a 19" rack that is designed to hold equipment of the weight of the Vega.

### Contact Details

Email: [support@vegastream.com](mailto:support@vegastream.com)

Web: <http://www.vegastream.com>

EMEA Office  
VegaStream Limited  
Berkshire Court  
Western Road  
Bracknell  
Berks RG12 1RE  
UK

+44 (0) 1344 784900

USA Office  
VegaStream Inc.  
3701 FAU Boulevard  
Suite 200  
Boca Raton  
FL 33431  
USA

+1 561 995 2300