



Vega 5000 Quick Start Guide


Congratulations on your purchase of a Vega 5000 Voice Over IP gateway. This Quick Start guide will assist you through the process of configuring your new gateway.

If you would like further details about the parameters you are configuring or you want to know more about the capabilities of your Vega 5000 please visit www.VegaAssist.com and start by looking at the Quick Config reference guide.

We advise that before connecting and using your Vega 5000 for the first time, you visit the above-mentioned VegaAssist website and read the 'Safety and Compliance Information' document which contains important details that you should be aware of.

1. Connecting your Vega 5000

Connect your Vega 5000 using its telephony, Earth point, power and LAN connections.

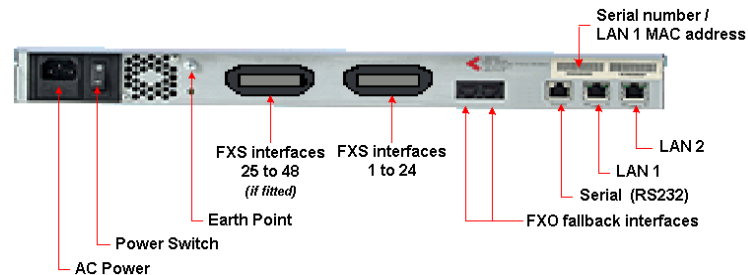

The Earth point on your Vega serves a dual role as a safety Earth and it stops noise on telephone lines in electrically noisy conditions. It must be connected.


The model of Vega 5000 that you have purchased determines the interfaces that you will see on the rear of your unit. The Vega 5000/24 has a single FXS telephony connector and the Vega 5000/48 has 2 FXS telephony connectors.

The FXS telephony connectors are known by various names, RJ21, Amphenol and Telco 50. These connectors support 24 2-wire analogue telephone connections.

For EMC compliance you must attach the Ferrite collar(s) supplied around the cable leaving each RJ21 / Amphenol / Telco 50, close to the Vega 5000.


You should connect to these connectors as follows:

Vega 5000/24 and Vega 5000/48 – first 24 ports:

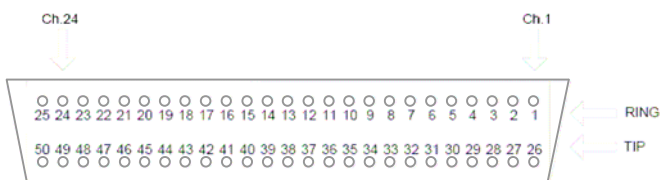

FXS interface 1 (IF:0101) = pin 1 and pin 26
FXS interface 2 (IF:0102) = pin 2 and pin 27
...
FXS interface 24 (IF:0124) = pin 24 and pin 49 (pins 25 and 50 are unused)

Vega 5000/48 – ports 24 to 48:

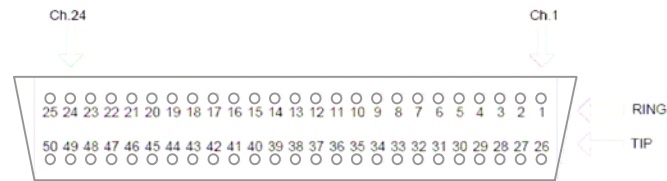

FXS interface 25 (IF:0125) = pin 1 and pin 26
FXS interface 26 (IF:0126) = pin 2 and pin 27
...
FXS interface 48 (IF:0148) = pin 24 and pin 49 (pins 25 and 50 are unused)

FXO fallback ports (IF:0201 and IF:0202) are connected through RJ45 (cat 5) or RJ11 connections.

LAN interfaces 1 and 2 may be connected to 10, 100 or 10/100 Mbps hubs, routers or switches.

It is important that if both LAN 1 and LAN 2 are to be used that they are connected to separate (non-overlapping) subnets.

2. Getting an IP address


The Vega 5000 uses DHCP to pick up IP addresses for its LAN interfaces. Each LAN interface is handled independently; if the LAN interface fails to get an IP address from the DHCP server, for example, because there is no DHCP server on the LAN, then the Vega will default the IP address of that LAN interface to 169.254.x.y where x and y are the decimal versions of the last two bytes of the LAN MAC address. The LAN 1 MAC address can be found underneath the barcode on the rear of the Vega 5000 unit. The LAN 2 MAC address can be found beside the barcode. (The LAN 2 MAC address is the LAN 1 MAC address plus 1).

A calculator that will calculate the 169.254.x.y address from the MAC address is available in the Vega Tools section of www.VegaAssist.com

3. Logging into the Vega

Enter the IP address of your Vega 5000 into the address line of your web browser and press enter or select 'Go'.

The Vega will present you with a login screen:

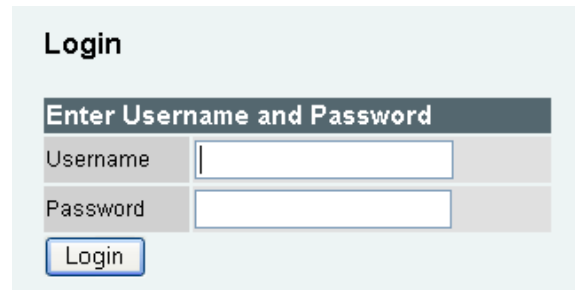

Enter the username and password.

By default these are set to:

Username = admin
Password = admin

4. Configuring your Vega

Select Quick Config. If a warning message appears informing you that that there is already configuration applied, you can remove the existing settings and start from the beginning by selecting 'Continue' then ticking the 'New Install?' box. This will ensure that any old, unwanted configuration is removed as you submit your new settings. Do not tick this box if you are simply amending existing configuration.



WARNING!

To exit Quick Config ALWAYS use either the Submit or Exit buttons adjacent to the Quick Config tabs. DO NOT use the navigation entries on the left hand menu, as using these may cause you to lose settings that you want to keep.

a) Basic Config

Start by selecting the basic config tab.

If this is a new installation, ensure that the 'New Install' option is ticked.

Select the country and then choose which emergency numbers are appropriate for the location of the Vega.

Now select the LAN settings and then the codecs to use for VoIP calls.

b) VoIP

Choose whether the Vega is going to route calls to a VoIP service provider or Proxy, or alternatively define up to 8 specific VoIP devices to route calls to.

If the VoIP service provider / proxy option is chosen then specify the proxy and registrar details. These will be provided by your VoIP service provider / proxy administrator.

Depending on your preferred configuration, registration may be configured as one single registration for the Vega gateway, or as one registration per FXS port.

All IP address entries may be provided as dotted decimal values (a.b.c.d) or as DNS names (e.g. SIP.VegaStream.com).

The list of telephone numbers supplied is a comma or space separated list of telephone numbers to be routed to that destination. The telephone numbers may include regular expression characters to make them telephone number ranges rather than just single telephone numbers.

Regular expressions

- . Any single digit
- [abc] Range of digits 'a', 'b' and 'c'
- [a-d] Range of digits 'a' thru 'd'
- [^abc] Range of digits excluding 'a', 'b' and 'c'
- * Previous character or regular expression repeated 0 or more times
- + Previous character or regular expression repeated 1 or more times
- ? Previous character or regular expression repeated 0 or 1 times
- \ Turn off the regular expression meaning of the following character, e.g. * = DTMF *

c) FXS

Enable and disable the interfaces as required and set up the telephone number(s) to route to each interface. If you have telephones attached, typically you will have a single number associated with each interface. If the interfaces are connected to the analogue trunk interfaces of a PBX then typically each interface will have a number range that needs to be routed to each interface.

d) FXO


Set up the telephone numbers to route to each FXO interface, using comma or space separated lists of telephone numbers and regular expressions if ranges are required.

When a call arrives on an FXO interface the Vega gets alerted to the fact by receiving a ringing voltage on its interface; the FXO line does not supply any dialled number information to the Vega. The Vega therefore needs to be configured with a telephone number to forward these incoming telephony calls to. In the 'Incoming Forward' field enter the telephone number that calls received on this telephone interface should be forwarded to.


If the Vega is powered down or is being upgraded, the two FXO interfaces fallback to a hardwired connection through to the first two FXS interfaces. This allows calls to be made through the first two FXS interfaces (to these FXO interfaces) even when the Vega is unable to actively process calls.

e) Saving your configuration

Press Submit to save, apply and activate the changes you have made using Quick Config. Pressing Submit will bring up a confirmation request. Select OK to continue and activate the changes or Cancel to take you back to the Quick Config pages.

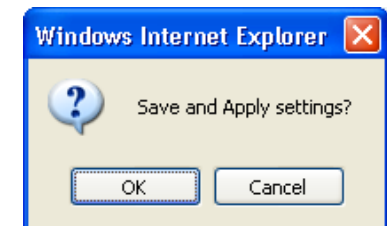

Selecting Ok to the above question will activate most Quick Config settings. Some parameters, like the IP address of the Vega, will however require the Vega to be re-booted. If a reboot is required the Vega will ask whether this should occur immediately or whether you wish to do it manually later. If later is selected, the reboot button on the left hand side menu will be left RED to indicate that a reboot is still required to activate certain new parameters.

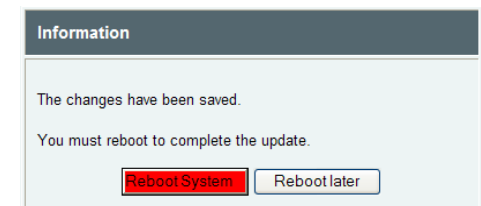

If you decide that you want to abandon the changes just made in Quick Config then select Exit. A confirmation request will be displayed, select OK to exit or cancel to return to the Quick Config pages.



Help!

If you encounter problems, please refer to www.VegaAssist.com or contact your Vega 5000 reseller directly.